



ONE-CUP
COFFEE MAKER



HAPPINESS IS HOMEMADE

Helping you eat better is at the core of everything we do. That's why we make products to help you cook delicious homemade meals. We believe in unprocessed living and that there's no substitute for food that's cooked with love.



Dash

ONE-CUP COFFEE MAKER

Important Safeguards.....	4-5
Parts & Features.....	6-7
Setting Up Your Coffee Maker.....	8
Get Brewing.....	9
Tips & Tricks.....	10
Maintenance.....	11
Recipes.....	12-17
Customer Support.....	18
Warranty.....	19

PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- For household use only.
- Thoroughly wash and dry One-Cup Coffee Maker before using or the first time. Water is not allowed to splash inside the machine.
- To prevent the risk of fire, electric shock, or personal injury, do not place the cord, plug, or unit near water or other liquids.
- Do not touch hot surfaces. Use handles or knobs.
- Scalding may occur if the lid is removed during the brewing cycles.
- To reduce the risk of fire or electric shock, do not remove the bottom cover on the appliance.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- WARNING: Hot Steam.
- Caution: Risk of injury - replace the carafe within 30 seconds while brewing.
- Warning: After brewing is finished turn off appliance.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Extension cords are not recommended for use with this appliance.
- Always be sure to unplug the appliance from outlet and allow it to cool completely prior to assembly, disassembly, cleaning, and storage.

- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not use the appliance if any of the parts are damaged.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM - 7PM PT Monday - Friday or by email at support@storebound.com.
- Improper use of the One-Cup Coffee Maker can result in property damage or even in personal injury.
- Do not use appliance for purposes other than its intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- When disposing of the One-Cup Coffee Maker, do not discard it with general household waste; instead, drop it off at a designated electronic waste recycling facility.
- Do not use appliance outdoors or for commercial purposes.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- This appliance has a polarized plug (one blade is wider than the other).

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- A short detachable power supply cord is provided to reduce risks resulting from becoming entangled in, or tripping, over a longer cord. Longer detachable power supply cords or extension cords are

available and may be used if care is exercised in their use. If a long detachable power supply cord or extension cord is used:

- 1) The marked electrical rating of the detachable power supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled unintentionally.



SAVE THESE INSTRUCTIONS

Clean your One-Cup Coffee Maker thoroughly before use. Always unplug the appliance prior to cleaning or storing.

WARNING: The One-Cup Coffee Maker is NOT dishwasher safe.

WARNING: Always turn Coffee Maker OFF when not in use.

- Make sure all parts are completely dry before and after each use.
- After the Coffee Maker has run for 5 minutes, the appliance will automatically power OFF.
- For your safety, do not open the lid while the Coffee Maker is in use.
- Once you add cold water to the machine, turn on the machine and wait 5 minutes.
- There is a overheating protection device that will activate to prolong the life of the machine.
- After each use, once appliance cools down, discard the used coffee from the Coffee Filter.
- Do not overfill the appliance with water as it may cause overflow. The brewing basket may also overflow if too much water is added. Overfilling could affect the the quality of the next coffee cup as well as the life of the machine.
- We recommend no more than 3 tablespoons of ground coffee.

ATTENTION: Appliance holds 6 oz to 14 oz of water. Do not overfill Water Tank with water or the Coffee Filter with ground coffee.

WARNING: Allow appliance to cool down before cleaning.

- Place the Coffee Maker on a clean, stable surface.
- Swivel the Shower Head to the left, remove the Coffee Filter from the Coffee Basket and add the desired amount of ground coffee into the Coffee Filter.
- Place the Coffee Filter back into the Filter Basket and swivel the Shower Head back above the Coffee Filter & Basket.
- Add the desired amount of cold water (between 6 oz-14 oz) into the Water Tank. Do not exceed 14 oz.
- Plug in the Coffee Maker and press the Power Button to turn on the appliance. Blue light will indicate that the appliance is working.

- For delicious coffee, we recommend one-time use for ground coffee in the Coffee Filter. The taste will decrease in quality if the coffee is reused.
- We recommend 2 tbsp per 1 (8 oz) cup of brewed coffee and 3 tbsp (max) for 14 oz of coffee.
- Note: If the Coffee Filter overflows the machine will automatically stop brewing.

IMPORTANT: THE ONE-CUP COFFEE MAKER IS NOT DISHWASHER SAFE. DO NOT SUBMERGE COFFEE MAKER IN WATER OR ANY OTHER LIQUIDS. TO AVOID DAMAGING THE APPLIANCE, NEVER USE ABRASIVE OR HARSH CLEANING PRODUCTS TO CLEAN THE COFFEE MAKER.

In order to keep your One-Cup Coffee Maker in pristine working order, follow the cleaning recommendations after each use:

- Before cleaning or moving the appliance, unplug the One-Cup Coffee Maker and allow it to cool completely.
- Make sure to dispose of the used coffee immediately after each use.
- Wipe down the Body of the appliance with a soft, damp cloth or sponge.
- Gently wash the Coffee Filter and Coffee Basket in warm, soapy water and

rinse thoroughly. Make sure not to get the bottom of the Coffee Maker wet.

- Note: Clean the permanent Coffee Filter regularly to prevent residue build-up.
- Do NOT dry the inside of the water tank with a paper towel, as lint may remain. Use a sponge.
- Dry all parts thoroughly. Store in a cool, dry place.
- Should your appliance require any maintenance, leave service to qualified personnel.
- Use baking soda or a mild cleaning detergent to remove any stains on the machine.



RECIPES

delicious & satisfying ideas for everyday coffee



DAIRY-FREE VANILLA ICE COFFEE

Ingredients

- 1 (8 oz) cup brewed vanilla coffee
- Almond, coconut or soy milk, to taste
- 1 cup of ice

Directions

Using 1 (8 oz) cup of water and 2 tbsp of ground vanilla coffee, brew your coffee.

After brewing is complete, place cup of coffee into refrigerator and let cool for half an hour.

Take a separate glass and fill with a cup of ice cubes into the glass. Once the coffee is chilled, remove from fridge and pour into the glass with the ice cubes. Add your milk of preference and stir.

MASON JAR CAPPUCCINO

Ingredients

- 6 oz brewed coffee
- ½ cup whole milk
- dash of cocoa powder

Directions

Brew 1 (8 oz) cup of coffee using 2 tbsp ground coffee (approximately 2 oz of water will evaporate while brewing, leaving you with 6 oz of coffee).

Take a mason jar and fill halfway with milk. Put on a lid on then shake the jar for a minute. Once shaken, remove the lid and place the mason jar with milk into the microwave for 30 seconds.

Once milk is warm and frothed, combine with your brewed coffee and enjoy your homemade cappuccino.

HOMEMADE PUMPKIN SPICE LATTE

Ingredients

- 3 oz brewed coffee
- 1 cup 2% milk
- 1 tbsp pumpkin purée
- 1/4 tsp vanilla extract
- 1/4 tsp pumpkin spice seasoning
- dash of cinnamon (optional)
- organic whipped cream (optional)
- caramel sauce (optional)

Directions

Brew 3-4 oz of strong ground coffee in your One-Cup Coffee Maker.

Over medium heat, bring the milk to a slight boil in a saucepan. Whisk in the pumpkin purée, vanilla extract and pumpkin spice seasoning. Stir as you wait for the mixture to boil.

Take the coffee mug with your already brewed coffee and pour in the warmed pumpkin spiced milk. You may have a little extra milk.

Top it off with a thin layer of whipped cream and/or caramel sauce drizzle. Garnish with a sprinkle of cinnamon.



For product support, warranty, and maintenance related questions, please contact StoreBound directly at 1-800-898-6970 from 7AM - 7PM PT Monday - Friday, or by email at support@storebound.com.

REPAIRS

DANGER! Risk of electric shock! The One-Cup Coffee Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Model: DPCM100XX

Voltage 120V ~ 60Hz

Power Rating 700 W

Stock#: DPC100_20170215_V1

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@storebound.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

