



# ILLUSION MIRRORED **KETTLE**

Instruction Manual and Recipe Guide

DMGK300

## HAPPINESS IS HOMEMADE

Helping you eat better is at the core of everything we do. That's why we make products to help you cook delicious homemade meals. We believe in unprocessed living and that there's no substitute for food that's cooked with love.



Dash

# ILLUSION MIRRORED **KETTLE**

Safety Guidelines .....	4-5
Parts & Features .....	6-7
Safety Features .....	8-9
Setting Up Your Kettle .....	10
Using Your Kettle.....	11
Cleaning & Maintenance .....	12
Hot Ideasww3	
Customer Support .....	14
Warranty.....	15

# IMPORTANT SAFEGUARDS

## PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Wash and dry Tea Kettle before using for the first time.
- Make sure that the Kettle, Power Base and cord are completely dry before each use.
- Prior to first-time use, boil water in the Tea Kettle and then pour it out. This will help to eliminate any odors.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM - 7PM PT Monday - Friday or by email at [support@storebound.com](mailto:support@storebound.com).
- To prevent the risk of fire, electric shock, or personal injury, do not place the cord, plug, or unit near water or other liquids.
- **WARNING:** To avoid electric shock, do not overfill Kettle. Water level should never go above the Max 1.7L marker.
- Never immerse the Power Base or Kettle in water or any other liquid; instead, wipe the surface with a soft, damp cloth, and properly clean inside of Kettle (see Cleaning & Maintenance instructions on page 12).
- Never leave appliance unattended when in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always be sure to unplug the appliance from outlet prior to assembly, disassembly, cleaning, and storage.
- To prevent personal injury, do not touch the surface of the Tea Kettle during or immediately following use. Always hold by the handle.
- Allow Tea Kettle to cool completely before cleaning or storing.
- Do not operate any appliance with a damaged cord or plug.

# IMPORTANT SAFEGUARDS

- Do not use the appliance if any of the parts are damaged.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not use appliance outdoors or for commercial purposes.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Extension cords are not recommended for use with this appliance.
- If an extension cord must be used, make sure the electrical rating of the wire is compatible with the Tea Kettle.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- When disposing of the Tea Kettle, do not discard with general household waste; instead, drop off at a designated electronic waste recycling facility.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Tea Kettle can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

**PLEASE READ AND SAVE THIS  
INSTRUCTION AND CARE MANUAL**

## PARTS & FEATURES

- A** Lid
- B** Lid Release Button
- C** Spout
- D** Handle
- E** Glass Body
- F** Power On/Off
- G** Indicator Light
- H** Power Base



### **SAFETY FEATURES**

#### **Boil-Dry Safety Protection**

A safety feature that automatically shuts off the Tea Kettle when there is little or no water in the pot. The Kettle will shut off automatically in approximately 20 seconds. If this occurs, let the Kettle cool before adding more water.

#### **Soft-Open Lid**

An internal-gear mechanism ensures that the Lid opens slowly, allowing for steam to escape gradually and safely. This slow release of steam helps to prevent personal injury.

#### **Cool-Touch Handle**

Handle stays cool while the Kettle is in use, providing for easy and safe pouring even when the Kettle's glass surface is still hot.



## SETTING UP YOUR KETTLE

Clean your Illusion Mirrored Kettle thoroughly before using.  
Always unplug the appliance prior to cleaning or storing.

**WARNING:** The Illusion Mirrored Kettle and its Power Base are NOT dishwasher safe.

### BEFORE FIRST USE

Remove all packaging material and stickers before using your Illusion Mirrored Kettle.

- Using a dish brush, wash the inside of the Kettle with warm soapy water and then rinse thoroughly.
- To sterilize the Kettle, fill with water to the MAX line, place on Base, and press the On/Off Lever down. Once water is boiling, discard the water and allow the Kettle to cool.

**ATTENTION:** Do not use abrasive scrubbers, sponges, or chemical cleaners on the interior or exterior of the Kettle as they will damage the appliance and the exterior mirror finish.

**WARNING:** Never fill the Kettle above the Max 1.7L marker. Exceeding 1.7L can result in electric shock.



1. Press the Lid Release Button to open the Lid.

2. Fill the Kettle with water. Make sure not to exceed the Max 1.7L mark. Close the Lid.



3. Put the Power Base on a flat and stable surface. Plug the cord into a power outlet.

4. Place the Kettle on the Power Base and push down the On/Off Lever to turn the appliance on. The Indicator Light will illuminate, signaling that the Tea Kettle is heating up.



5. Once the water comes to a boil, the Kettle will automatically turn off. To serve, lift the Kettle off of the Power Base by the Handle and tilt to pour.

## CLEANING & MAINTENANCE

### IMPORTANT NOTE:

do not submerge power base or kettle in water or any other liquids. To avoid damaging the appliance, never use abrasive or harsh cleaning products to clean the kettle surface.

In order to keep your Illusion Mirrored Kettle in pristine working order, follow the cleaning recommendations periodically.

1. Fill the Kettle with water up to the 1L mark. Place on the Power Base and press the On/Off Lever down to turn on.
2. After the water comes to a boil and the Kettle automatically shuts off, remove from the Power Base. Pour in a small amount of dish soap and soak overnight or for 8-12 hours.
3. Pour out the soapy water and rinse until no suds remain.
4. Fill the Kettle with 1L of clean water and bring to a boil. Carefully pour out the hot water.
5. Allow your Tea Kettle to cool and then thoroughly dry with a soft cloth.  
**Note:** Make sure that the Kettle, Power Base and cord are completely dry before and after each use.

Here are some ideas for foods and beverages that you can make with your Illusion Mirrored Kettle.



**TEA**



**FRENCH PRESS  
COFFEE**




**HOT CHOCOLATE**



**RAMEN NOODLES**



**OATMEAL**

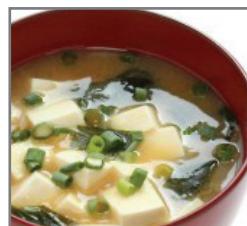

**MISO SOUP**



**BOUILLON SOUP**



**COUSCOUS**



**HOT CEREAL**

## CUSTOMER SUPPORT

For product support, warranty, and maintenance related questions, please contact StoreBound directly at 1-800-898-6970 from 7AM - 7PM PT Monday - Friday, or by email at [support@storebound.com](mailto:support@storebound.com).



Still need help? Call our customer support team from Monday to Friday at 1-800-895-6920

### REPAIRS

**DANGER!** Risk of electric shock! The Compact Air Fryer is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

### TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz

Power Rating 1000 W

Stock#:DMGK300\_20150331\_V3

## STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to [support@storebound.com](mailto:support@storebound.com).  
There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

