

DASH go™
unprocess your food™



EASY TOASTER

INSTRUCTION MANUAL

MODEL DEZT001



EASY TOASTER

Important Safeguards	4-5
Parts & Features.....	6-7
Using Your Toaster	8-9
Maintenance	10-11
Tips & Tricks.....	12
Recipe Ideas	13
Customer Support.....	14
Warranty.....	15

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE THIS INSTRUCTION & CARE MANUAL

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Warning: hot surfaces. Do not touch sides of Easy Toaster while appliance is in use. Use handles or knobs.
- To prevent the risk of fire, electric shock, or personal injury, do not place the cord, plug, or unit near or in water or other liquids.
- Never leave appliance unattended when in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Do not use appliance outdoors or for commercial purposes.
- Do not place wet foods inside the Easy Toaster.
- Allow Easy Toaster to cool completely before moving, cleaning, or disassembling.
- Do not use the appliance if any of the parts are damaged. Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock or personal injury.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters. Extension cords are not recommended for use with this appliance. However, if an extension cord must be used, make sure the electrical rating of the wire is compatible with the Easy Toaster.
- Never insert oversized foods, metal foil packages, aluminum foil, or utensils in the appliance as this may result in fire, electric shock or personal injury.
- Do not place utensils, fingers, or other foreign objects inside the Easy Toaster.
- To disconnect, turn any control to "off", then remove plug from wall outlet.

IMPORTANT SAFEGUARDS

- Do not use appliance for other than intended use.
- Improper use of the Easy Toaster can result in property damage or even in personal injury.
- Do not attempt to dislodge food when the Easy Toaster is on. Unplug and allow the appliance to cool down completely before proceeding.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Close supervision is necessary when appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment
- Do not place Easy Toaster near curtains, drapes, plastic, walls, or other flammable materials when in use as this will result in fire.
- Always be sure to unplug the appliance from outlet prior to assembly, disassembly, cleaning, and storage.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- A short power supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- If an extension cord is used, the marked electrical rating of extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

SAVE THESE INSTRUCTIONS

PARTS & FEATURES

1. Toasting Slots
2. Toast Lift Lever
3. Control Dial
4. Warm
5. Cancel Button
6. Defrost

PARTS & FEATURES



USING YOUR TOASTER

Make sure the Easy Toaster and all of its components are clean prior to use.

BEFORE FIRST USE

- Remove all packaging material and stickers from your Easy Toaster.
- Clean the appliance and all of its components prior to assembly and use.
- Make sure loose objects have not fallen inside the Toaster.
- In order to eliminate any manufacturing residues, turn on the Toaster without bread and set the Control Dial to Medium. The appliance may give off some smoke which is perfectly normal.

GETTING STARTED

Note: Never stick your bare hands in the Toaster to remove food.


1. Place the Easy Toaster on a clean and stable surface. Make sure that no liquids or flammable objects are near the appliance or cord. Plug in the Toaster.
2. Place the bread slices in the Toasting Slots. Depending on desired results, adjust the Control Dial to Warm, Defrost, or preferred browning level.
3. Press the Toast Lift Lever down until it locks into place to start the heating process. You can stop the toasting process at any time by simply pressing the Cancel Button. If the Lever doesn't lock, check if the appliance is plugged in. The Toast Lift Lever will not click into place if the Toaster is not plugged in.
4. Always unplug the appliance after use and let it cool down before cleaning or storing.

USING YOUR TOASTER

Type	Description
DEFROST	Thoroughly toasts frozen bread with an extended toasting cycle.
WARM	Warms already toasted bread or lightly toasts bread that is not browned enough.

CONTROL DIAL

Three heating levels give you precise toasting results. Simply select your desired browning level from the chart below.

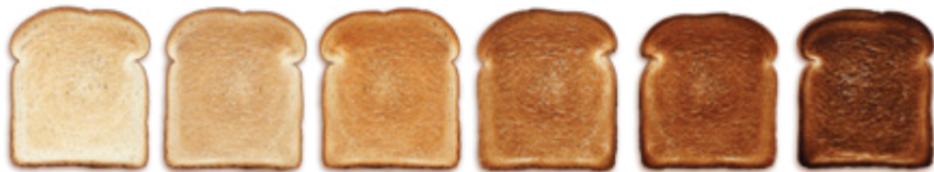

Light

•

Medium

•

Dark

MAINTENANCE

DO NOT SUBMERGE the unit in water. Instead, use a damp cloth to wipe down the surface of the Toaster.

- Before cleaning your Toaster, unplug the appliance and let it cool down completely.
- Do not use abrasive scrubbers, sponges, or chemical cleaners to clean your appliance as this may damage it. Instead, use a damp cloth to wipe down the surface of your Easy Toaster.
- When not in use, store your Toaster in a clean, dry place.



TIPS & TRICKS

- If the bread is too small to be removed from the Toasting Slot, gently push the Toast Lift Lever up and then remove the toasted bread. If you still cannot carefully take out the bread, unplug your Toaster and use thin heat-resistant tongs to remove the bread from the Toasting Slot.
- Do NOT touch the metal parts as they will be hot!
- For pop tarts or frozen waffles, toast as directed.
- ONLY toast food that is meant to be toasted in a slot toaster.
- If the Toaster jams, the bread might be too thick. Remove the bread from the Toaster and slice it thinner.



RECIPE IDEAS



Lox Bagel

toasted bagel, light cream cheese, lox, red onion, capers, dill



Bruschetta

toasted baguette, diced tomatoes, fresh basil, minced garlic, olive oil, sea salt



Strawberry Nutella

toasted bread, Nutella, sliced strawberries



Avocado Toast

toasted baguette, mashed avocado, diced tomato, onion, salt, pepper, drizzle of olive oil

CUSTOMER SUPPORT

For product support, warranty, and maintenance related questions, please contact StoreBound directly at: 1-800-898-6970 from 7AM - 7PM PST, Monday - Friday, or by email support@storebound.com.

REPAIRS

DANGER! Risk of electric shock! The Dash Go Easy Toaster is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the device.

TECHNICAL SPECIFICATIONS

Model Number DEZT001

Voltage 120V ~ 60Hz

Power Rating 750 W

Stock#: DET_20150605_V2

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will conduct troubleshooting in an attempt to fix any minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to: support@storebound.com

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.



DASH go™
unprocess your food™

For more information, please visit bydash.com
Customer Support 1-800-898-6970